

Panasonic

Digital Cordless Phone

Model No. **KX-TG7200FX/KX-TG7202FX**

Digital Cordless Answering System

 
Model No. **KX-TG7220FX**

Quick Guide

This unit is designed to be used in Czech, Slovakia, and central Europe. To use this unit in your country, first change the unit's region setting to match your country. Change the unit's display language as needed. Refer to "Changing the unit's region setting" in the operating instructions.

Connections


Base unit

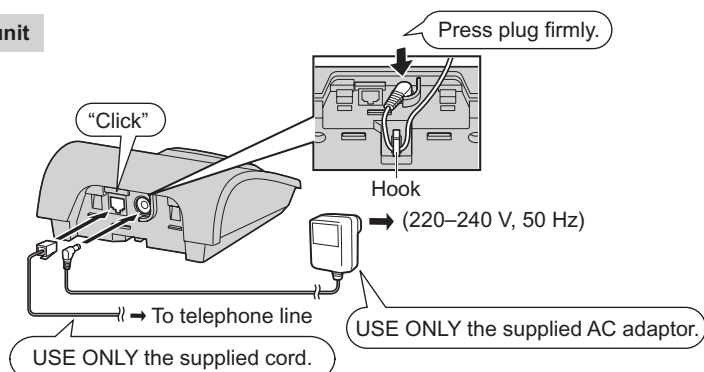

Important:

- If you use a telephone line cord which is not supplied, the unit may not work properly.

 Charger (KX-TG7202)

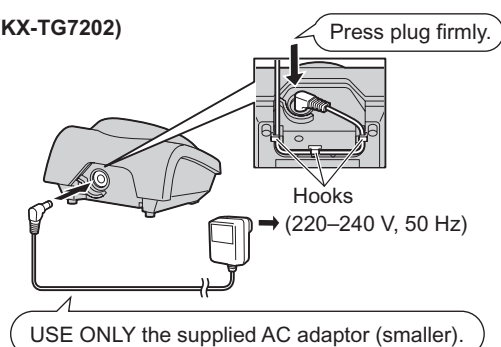


PQQW15775ZA DC0607DA0

FX-3/4

Battery installation/Battery charge

 Initial charge: 7 hours

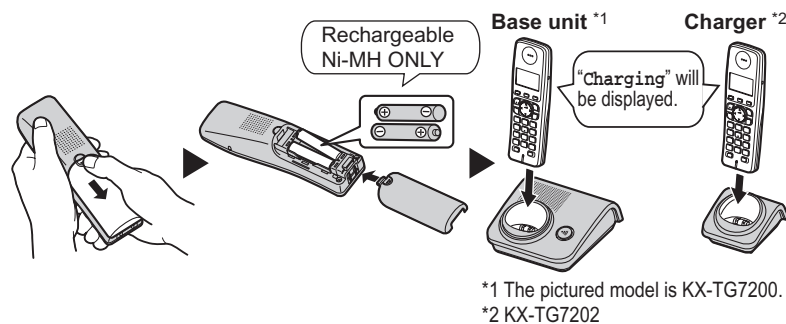


Note:

- USE ONLY rechargeable Ni-MH batteries.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Operating tips

Using the navigator key

 Press [▲], [▼], [◀], or [▶] to navigate through menus and to select items shown on the display.

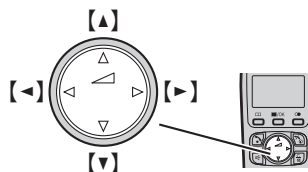

Adjusting the receiver or speaker volume (◀)

Press [▲] or [▼] while on a call.



Display language

16 display languages are available.




You can select "Deutsch", "English", "Magyar", "Polski", "slovenčina", "Čeština", "Hrvatski", "Slovenscina", "Eesti", "LIETUVIŠKAI", "Latviešu", "Română", "БЪЛГАРСКИ", "Srpski", "МАКЕДОНСКИ", or "Shqip".

- 1 [📞] → [OK]
- 2 Press [▲] or [▼] to select "Handset Setup". → [▶]
- 3 Press [▲] or [▼] to select "Display Setup". → [▶]
- 4 Press [▲] or [▼] to select "Select Language". → [▶]
- 5 Press [▲] or [▼] to select the desired language. → [▶] → [📞]

Dialling mode (tone/pulse)





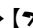
















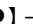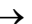



- 1 **[/OK]**
- 2 Press **[▲]** or **[▼]** to select “Base Unit Setup”. → **[▶]**
- 3 Press **[▲]** or **[▼]** to select “Call Options”. → **[▶]**
- 4 Press **[▲]** or **[▼]** to select “Dial Mode”. → **[▶]**
- 5 Press **[▲]** or **[▼]** to select the desired setting. → **[▶]** → **[⓪]**

Date and time



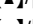

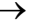










- 1 **[/OK]**
- 2 Press **[▲]** or **[▼]** to select “Handset Setup”. → **[▶]**
- 3 Press **[▲]** or **[▼]** to select “Time Settings”. → **[▶]**
→ Press **[▲]** or **[▼]** to select “Set Date & Time”. → **[▶]**
- 4 Enter the current date, month, and year.
- 5 Enter the current hour and minute.
- 6 **[/OK]** → **[⓪]**

Basic operations

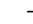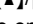

Making/Answering calls (Handset)

Making calls	Dial the phone number. → []/[
Answering calls	[]/[
Hanging up	[]
Receiver/speaker volume	Press [] or [] while on a call.
Making a call using the redial list	[] → []/[]: Select the desired number. → [
Handset ringer volume	1 [ /OK] 2 []/[]: "Handset Setup" → [] 3 []/[]: "Ringer Setup" → [] 4 []/[]: "Ringer Volume" → [] 5 []/[]: Select the desired volume. → [] → [




Phonebook (Handset)

Adding entries (names and phone numbers)	1 [] → [ /OK] 2 []/[]: "New Entry" → [] 3 Enter the party's name (16 characters max.). → [ /OK] 4 Enter the party's phone number (24 digits max.). → [ /OK] 5 []/[]: "Save" → [] → [] • To enter a name, see the character table in the operating instructions.
Making calls	1 [] 2 []/[]: Select the desired entry. → [

Answering system (Base unit): KX-TG7220

Answering on/off	Press [] to turn on/off the answering system.
Listening to messages	[

Frequently asked questions

Question	Cause & solution
Why is  flashing?	<ul style="list-style-type: none"> • The handset is too far from the base unit. Move closer. • The base unit AC adaptor is not connected. Check the connections. • You are using the handset or base unit in an area with high electrical interference. Place the handset and base unit away from interference sources, such as antennas and mobile phones. • The handset is not registered to the base unit. Register it (page 7).
Why can I not make calls?	<ul style="list-style-type: none"> • The dialling mode setting is incorrect. Set to “Tone” or “Pulse” as needed.
What should I do when the handset does not turn on?	<ul style="list-style-type: none"> • Make sure that the batteries are installed correctly. • Fully charge the batteries. • Clean the charge contacts and charge again.
How long is the battery operating time?	<ul style="list-style-type: none"> • When you are using fully-charged Ni-MH batteries (supplied batteries); In continuous use: 17 hours max. In continuous standby mode: 180 hours max. • It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use). • Actual battery performance depends on a combination of how often the handset is in use and how often it is not in use (standby).
Can I keep the handset on the base unit or charger when I am not using it?	<ul style="list-style-type: none"> • Even after the handset is fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries.
When should I replace the batteries?	<ul style="list-style-type: none"> • If the batteries are fully charged until  is displayed, but  is displayed after a few calls, replace the batteries with new ones.
What is a PIN?	<ul style="list-style-type: none"> • The PIN is a 4-digit number that must be entered in order to change certain base unit settings. The default PIN is “0000”.


Frequently asked questions

Question	Cause & solution
What do I need to do to display caller information?	<ul style="list-style-type: none">• You need to subscribe to Caller ID service. Consult your service provider/telephone company for details.• The message "You must first subscribe to Caller ID." will be displayed until you receive caller information after subscribing to Caller ID service.
What should I do when: – I hear static or sound cuts in and out? – there is interference from other electrical units?	<ul style="list-style-type: none">• Place the handset and the base unit away from other electrical appliances.• Move closer to the base unit.• Your unit is connected to a telephone line with DSL service. We recommend connecting a filter (contact your DSL service provider) to the telephone line between the base unit and the telephone line jack.
What should I do when the operating time seems to be short even after I fully charged the batteries?	<ul style="list-style-type: none">• Wipe the battery ends (+, -) and the unit contacts with a dry cloth.
What do I need to do to erase the missed call number (for example, "3 Calls") from the display?	<ul style="list-style-type: none">• There are unviewed missed calls remaining. View them using the following method. 1 [≡/OK] 2 [▲]/[▼]: "Caller List" → [▶] 3 Press [▼] to search from the most recent call, or press [▲] to search from the oldest call.

Registering a handset to the base unit

The supplied handset and base unit are pre-registered. When you purchase an additional handset, refer to the additional handset's installation manual for registration. If for some reason the handset is not registered to the base unit, register the handset.

 
- 1 **[OK]**
- 2 **[▲]/[▼]**: "Handset Setup" → **[▶]**
- 3 **[▲]/[▼]**: "Registration" → **[▶]**
- 4 **[▲]/[▼]**: "Register H.set" → **[▶]**

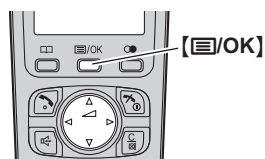

- 5 Proceed with the operation for your model.


■KX-TG7200/KX-TG7202

 Press and hold **[OK]** on the base unit for about 5 seconds. (No registration tone)

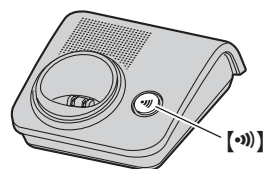

■KX-TG7220

 Press and hold **[OK]** on the base unit for about 5 seconds, until the registration tone sounds.

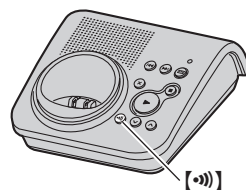

- 6 Wait until "Enter Base PIN" is displayed.
→ Enter the base unit PIN (default: "0000").
→ **[OK]**



Optional services (Caller ID and SMS)

If you subscribe to Caller ID service, you can:



– display caller information

To use SMS, you must subscribe to Caller ID and/or appropriate service.



SMS (Short Message Service)