
Gigaset

А58н

The handset at a glance



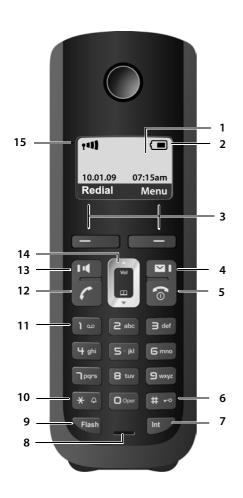

- 1 **Display** in idle status (example)
- 2 Charge status of the batteries (→ page 8)
- 3 Display keys (→ page 14)
- 4 Message key (→ page 24) Access to calls and message lists; Flashes: new message or new call

5 End Call key, On/Off key

End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)

6 Pound key (#)

Keypad lock on/off (press and hold in idle status); toggle between uppercase/lowercase and digits

7 Internal key

Make an internal call (→ page 21)

8 Microphone

- 9 Flash key
 - Recall (flash)
 - Insert a dialing pause (press and hold)

10 Asterisk key (*)

Ringer melodies on/off (press and hold); With an existing connection: Switch between pulse dialing/touch-tone dialing (press briefly)

11 **Key 1** (→ page 25)

Fast access to the answering machine (dependent on base station)/network mailbox (press and hold)

12 Talk key

Answer a call (press briefly), start dialing (press and hold)

13 Speaker key

Switch between earpiece and handsfree mode; Lights up: Handsfree activated Flashes: Incoming call

- 14 **Control key** (→ page 14)
- 15 Signal strength (→ page 8)

Safety precautions * A

Warning

Read the safety precautions and the user guide before use.

Explain them and the potential hazards associated with using the telephone to your children.



Only use the power adapter supplied, as indicated on the underside of the base station or charging cradle.



Only insert approved rechargeable batteries of the same type.

Never use ordinary (non-rechargeable) batteries as they may pose a health hazard or cause injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, such as a doctor's office.

To maintain compliance with the Industry Canada's RF exposure guideline, place the base station at least 20 cm from nearby persons.



Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splash proof (\rightarrow page 30).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your telephone to someone else, make sure you include the user guide.



Please remove faulty base stations from use or have them repaired by Gigaset Service, as they could interfere with other wireless services.



Dispose of batteries and the phone carefully. Do not pollute the environment.

Privacy of communications may not be ensured when using this telephone.

Emergency numbers cannot be dialed if the keypad lock is activated!

also see page 35

Contents

The handset at a glance	1
Safety precautions	2
First steps Check the package contents Setting up the charging cradle Connecting the charging cradle (if included) Setting up the handset for use What would you like to do next?	5
Using the phone Control key Display keys Keys on the keypad Correcting incorrect entries Menu guidance Activating/deactivating the handset Activating/deactivating the keypad lock Illustration of operating steps in the user guide	. 14 . 15 . 15 . 15 . 16
Menu tree	. 18
Making calls Making an external call Ending a call Answering a call Caller ID Handsfree talking Muting Making internal calls CID 2.5 services (network services)	. 19 . 19 . 19 . 20 . 21 . 21
Using the directory and lists	. 22 . 24
Using the network mailbox Configuring fast access for the network mailbox Viewing the network mailbox report	. 25 . 25
ECO DECT	. 26
Setting the alarm clock	. 26

Contents

Handset settings .	27
Changing date and time	27
Changing the display language	27
Setting the display	27
Activating/deactivating auto answer	27
Changing the handsfree/earpiece volume	
Changing ringer melodies	
Advisory tones	
Restoring the handset to the factory settings	29
Troubleshooting	30
Appendix	30
Caring for your telephone	30
Contact with liquid	30
Specifications	
Writing and editing text	
Industry Canada Certification	33
FCC / ACTA Information	33
Safety precautions	35
Service (Customer Care)	36
End-user limited warranty	36
Mounting the charging cradle on the wall	39
Index	40

First steps

Check the package contents



- One handset
- 2 One charging cradle
- 3 One power adapter for charging cradle
- 4 Two batteries
- 5 One battery cover
- 6 One user guide

Setting up the charging cradle

The charging cradle is designed for use in dry rooms in a temperature range of $+41^{\circ}$ F to $+113^{\circ}$ F.

▶ Set up the charging cradle on a flat, nonslip surface.

Please note

Keep in mind the range of the base station.

It is up to 984 feet in unobstructed outdoor areas and up to 165 feet inside buildings. The range is reduced when Eco Mode (→ page 26) is activated.

The feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furniture, the occurrence of marks on the surfaces cannot be completely ruled out.


For instructions on how to mount the charging cradle on a wall, → page 39.

First steps

Please note:

- Never expose the telephone to heat sources, direct sunlight, or other electrical devices.
- Protect your telephone from moisture, dust, and corrosive liquids and fumes.

Connecting the charging cradle (if included)

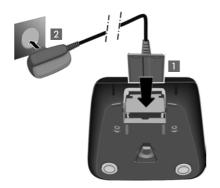

- ➤ Connect the flat plug of the power adapter 1.
- Plug the power adapter into the plug socket 2.

To disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2.



Setting up the handset for use

Carry out the following steps for each handset.



The display is protected by a plastic film. Please remove the protective film!

Inserting the batteries and closing the battery cover


Warning

Use only rechargeable nickel-metal hydride (NiMH) UL-approved AAA batteries. Never use a conventional (non-rechargeable) battery or other battery types, as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

▶ Insert the batteries in the correct orientation.

The polarity is indicated in/on the battery compartment.



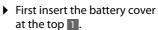

► Then press the cover 2. until it clicks into place.

To open the battery cover, for example, to replace the batteries, place your fingertip into the cavity on the casing and pull the battery cover upwards.



Registering the handset to the base station

Before you can use the phone, you must first register the handset to the base station. The actual registration procedure will depend on the type of base station.

Automatically register the handset to the Gigaset A580/A585 base station



▶ Place the handset with the display facing up in the base station.



The handset registers automatically.
Registration can take **up to 5 minutes**. **Do not remove the handset from the base station during this time**.

Please note

- ◆ Each key press interrupts the automatic registration.
- If automatic registration does not work, the handset will have to be registered manually.
- ◆ The handset must be registered manually to an A580 IP base station.

Manually registering the handset

You must activate manual registration of the handset on both the handset (1) and the base station (2).

1) On the handset:



(If you require further information on the illustration of these operating steps, please see \rightarrow page 17.)



Enter the system PIN of the base station (the default is 0000) and press OK.



The registration screen is displayed.

2) On the base station:

Within 60 sec. press and **hold** the registration/paging key on the base station (approx. 3 sec.).

The following is displayed after successful automatic or manual handset registration:



 the strength of the reception signal between base station and handset:

good to poor: ¹•■ ¹•■ ¹• ¹
no reception: ⑤ flashes

battery charge status:

- (flat to full)

- I flashes: batteries almost flat

- Imm flashes: charging procedure

The handset is assigned the lowest unassigned internal number (1–4). If more than one handset is registered to the base station, the internal handset number appears on the display, e.g. **INT 2**. If the internal numbers 1–4 are already assigned to other devices, the number 4 will be overwritten.

To charge the batteries, leave the handset in the base station/charging cradle.

Please note

Only place the handset in the base station or charging cradle that is intended for it.

Should you have any questions and problems → page 30.

Initial charging and discharging of batteries

The correct charge level can only be displayed if the batteries are first fully charged and discharged.



Place the handset in the base station or charging cradle for eleven hours.



Then remove the handset from the base station or charging cradle, and do not replace it until the batteries are completely discharged.

Please note

- ◆ After the first battery charge **and** discharge, you may replace your handset in its base station or charging cradle after every call.
- Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- After a while, the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. When registering the handset to an A580 IP base station, the date and time are set automatically via the Internet.



- Press the key below Menu on the display screen to open the main menu.
- Press the bottom of the Control key



... until the **Settings** menu item appears.

 Press the key below OK on the display screen to confirm your selection.



The **Date/Time** menu item appears on the display.

 Press the key below OK on the display screen to confirm your selection.



The **Set date/time** menu item appears on the display.

Press the key below OK on the display screen to open the input field.





If you want to correct an entry, press the top or bottom of the Control key to toggle between fields.





▶ Press the key below OK on the display screen to confirm your selection.





Press the key below OK on the display screen to confirm your selection.





▶ Press and **hold** the End Call key **③** to return to the idle status.

Area codes

To return calls using the incoming caller ID list (→ page 24), your phone's **area code** ("local area code") must be stored. If your phone is in a "multiple area code" area, the **extra codes** for this area must also be stored.

Local Area Code

Menu → Settings → Base → Local Area Code

Select and press OK.

Press the display key.

Enter local area code.

ি Press and **hold** (idle status).

Extra Codes

OK

Menu → Settings → Base → Extra Codes

Select and press OK.

The message Enter extra area code? displays.

OK Press the display key

The message Entry No. 1 displays, with an input field below. Type the

first extra area code to be assigned.

OK Press the display key.

Press and **hold** (idle status).

Repeat the above steps until all extra area codes for your area have been entered. A maximum of 5 extra codes can be stored.

Display in idle status

Once the phone is registered and the time set, the idle display is shown, as in this example. If the answering machine (depending on the base station) is activated, the answering machine icon ∞ will also be displayed in the header.




Your phone is now ready to use.

What would you like to do next?

Now that you have successfully started your A58H, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important topics.

If you are unfamiliar with menu-driven devices, such as other Gigaset telephones, you should first read the section titled "Using the phone" → page 14.

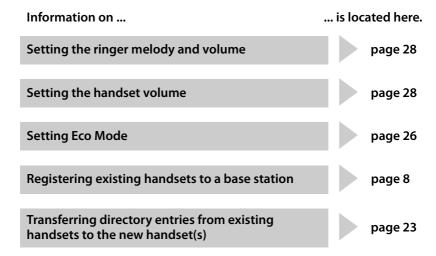

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 30) or contact our Customer Care team (→ page 36).

Using the phone

Control key

In the following description, the side of the Control key you need to press for each operation is indicated accordingly, (e.g. for "press the top of the Control key."

The Control key has a number of different functions:



When the handset is in idle status

Open the directory

Display the menu for setting the handset's call volume (→ page 28), ringer melodies (→ page 28), and advisory tones (→ page 29).

In the main menu, in submenus and lists

Scroll up/down line by line.

In input fields

Use the Control key to move the cursor to the left \bigcirc or right \bigcirc .


During an external call

Open the directory

Adjust the loudspeaker volume for earpiece and handsfree mode

Display keys

The function of the display keys changes depending on the particular operating situation. Example:

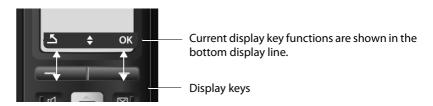

Important display keys:

Menu Open a context-dependent menu.

OK Confirm selection.

Delete key: Deletes one character at a time from right to left.

Go back one menu level or cancel operation.

Redial Open the last number redial list.

Keys on the keypad

/ □ / ★ □ , etc.

Press the matching key on the handset.

14

Enter digits or letters.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the Control key. You can then:

- ◆ Press **C** to delete the character to the left of the cursor
- ♦ Insert characters to the left of the cursor
- ◆ Overwrite the character (flashing) when entering the time, date, and so on

Menu guidance

Your phone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

▶ When the handset is in idle status, press Menu to open the main menu.

The main menu functions are shown on the display as a list with a name and icon.

To access a function, meaning to open the corresponding submenu (next menu level):

▶ Navigate to the function using the Control key 🗓. Press the display key OK.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

► Scroll to the function with the Control key 🗘 and press OK.

Or:

▶ Enter the corresponding shortcut digit combination (→ page 18).

Briefly press the End Call key once to return to the previous menu level/cancel the operation.

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

▶ Press and **hold** the End Call key 🛜.

Or:

Do not press any key: After two minutes, the display will automatically revert to idle status.

Any settings you have not confirmed by pressing OK will be discarded.

An example of the display in idle status is shown on \rightarrow page 12.

Activating/deactivating the handset

(a)

With the phone in idle status, press and **hold** the End Call key (confirmation tone) to switch off the handset.

Press and **hold** the End Call key again (confirmation tone) to switch the handset on.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.

⊷

Press and **hold** the pound key to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated, you will see the o_{--} icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

Emergency numbers cannot be dialed if the keypad lock is activated!

Illustration of operating steps in the user guide

The operating steps are shown in abbreviated form.

Example:

The illustration:

Menu → Settings → Handset → Auto Answer

means:



Press the display key Menu to open the main menu.



- Press the bottom of the Control key until the Settings menu item appears on the display.
- ▶ Press the display key OK to confirm your selection.



- Press the bottom of the Control key until the Handset menu item appears on the display.
- ▶ Press the display key OK to confirm your selection.



Press the bottom of the Control key until the **Auto Answer** menu item appears on the display.

Press the display key OK to activate/ deactivate the function (√ = on).

Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

Example: Menu [] [2 to] [2 to] for "Set ringer melody volume."


With the telephone in idle status, press Menu (open main menu):

4 Alarm Clock

4-1	Activation	→	page 26
4-2	Wake up time	→	page 26

5 Voice Mail (Menu dependent on base station)

7 Settings

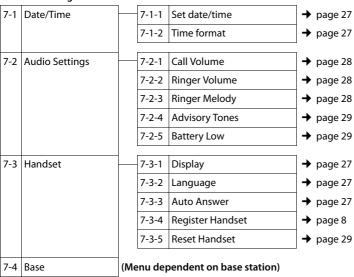

Making calls

Making an external call

External calls are calls using the public telephone network.

Enter the number and press the Talk key.

Or:



Press the Talk key , and then enter the number.

You can cancel the dialing operation with the End Call key .

You are shown the duration of the call while the call is in progress.

Please note

- Dialing with the directory
 (→ page 22), calls list (→ page 24)
 and last number redial list
 (→ page 24) saves you from repeatedly typing numbers.
- ◆ You can assign a number from the directory as a shortcut to the selected key (→ page 23).
- If your handset is registered to an A580 IP base station, please refer to the relevant user guid.

Ending a call



Press the End Call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen, and by the flashing Speaker key ••.

You can answer the call by:

- ▶ Pressing the Talk key <a>了.
- ▶ Pressing the Speaker key **■**.

If the handset is in the charging cradle and the **Auto Answer** function is activated

(→ page 27), the handset automatically answers the call when you remove it from the charging cradle.

To deactivate the ringer melody, press the Menu display key and select **Silent**. You can take the call as long as it is displayed on the screen.

Caller ID

Caller ID (CID) and Caller Name ID (CNID) are optional subscription services provided by your telephone service provider. These features supply incoming caller identification information that will be displayed on your handset.

Call display with Caller ID/ Name

If the caller's number is saved in your directory, the caller's name replaces the number on the display.




- 1 Ringer melody icon
- 2 Number or name of caller

The following is displayed in place of the number:

- External Call, if the user has not arranged caller ID.
- Not available, if no number has been received.
- Private, if the caller has blocked his caller ID.

Display with CID

If you have CID, then the name that is registered with your network provider for the caller's number will **also** be displayed. If the number of the caller is stored in your directory, the CID display is replaced by the corresponding directory entry.

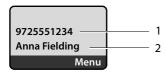

- 1 Caller's number
- 2 Name

The display shows:


- ◆ **Private**, if the caller has blocked caller ID.
- Not available, if the caller has not arranged caller ID.

Handsfree talking

In handsfree mode, instead of holding the handset to your ear, you can place it, for example, on a table in front of you. This allows others to participate in the call.

Activating/deactivating handsfree mode

Activating while dialing

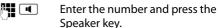

You should inform your caller before you use the handsfree function so that the caller knows someone else may be listening.

Switching between earpiece and handsfree mode

Press the Speaker key.

During a call, activate or deactivate handsfree mode.

If you wish to place the handset in the charging cradle during a call:

Press and hold the Speaker key while placing the handset in the base station. If the Speaker key does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume, → page 28.

Muting

You can deactivate the microphone in your handset during an external call.

Mute Press the display key to mute

the handset.

On Press the display key to switch

the microphone back on.

Making internal calls

Internal calls to other handsets registered with the same base station are free.

Calling other handsets

Start internal call. The display

shows Insert INT No.

Enter the internal number of the

receiving handset and press OK.

The handset is called.

Or:

All Press the display key. All hand-

sets are called.

Ending a call

Press the End Call key.

CID 2.5 services (network services)

If CID is activated and a waiting call is displayed, 4 different CID 2.5 services (network services) are selected.

During a call:

Menu Press the display key

Select with :

Take Message

The waiting caller is forwarded to the central office mailbox.

Hold Message

The waiting caller is put on hold and hears a message to this effect from the central office.

Call Back

The waiting caller is prompted by the central office to call again at a later time.

Add 2nd

The central office is prompted to initiate a conference call.

Please note

When the handset is muted a waiting call is not signaled on the display. To use the CID 2.5 services the device must be unmuted.

Using the directory and lists

The options are:

- Directory
- ◆ Last number redial list
- ◆ Call history
- Answering machine list

Directory

You can save up to 150 entries in the directory.

You can create a personalized directory for your particular handset. And you can also send the list or individual entries to other handsets (→ page 23).

▶ With the handset in idle status, open the directory by pressing the ↓ key.

Length of entries


Number: max. 32 digits
Name: max. 16 characters

Please note

You can assign a number from the directory as a shortcut to the selected key

→ page 23.

Saving the first number in the directory

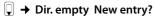




Enter the number and press OK.

Enter the name and press OK.

Storing a number in the directory

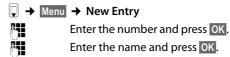

Order of directory entries

Directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

- 1. Space
- 2. Digits (0-9)
- 3. Letters (alphabetical)
- 4. Other characters

To get around the alphabetical ordering of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.

Selecting a directory entry



Open the directory

You have the following options:

- ◆ Use to scroll to the entry until the desired name is selected.
- ◆ Enter the first character of the name, or scroll to the entry using , if necessary.

Dialing with the directory





Press the Talk key. The number is dialed.

Managing directory entries

Editing entries

Menu → Edit Entry

14

Edit the number, if necessary, and press OK.

Edit the name, if necessary, and press OK.

Using other functions

Press the display key.

The following functions can be selected with **(**):

New Entry

4

Save new phone number.

Use Number

Save or modify a saved number, and then dial with , or save as a new entry; to do so, press Menu → Copy to Directory → OK after the number appears on the display.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Send Entry

Send a single entry to a handset (→ page 23).

Delete List

Delete all directory entries.

Send List

Send complete list to a handset (→ page 23).

Shortcut

Assign the current entry as a shortcut to the selected key.

Using shortcut keys

You can assign directory entries to the keys 0 and 2-9:

→ Shortcut → 👫 (press the key you want to assign the number to)

To dial: press and hold the required shortcut key.


To delete shortcuts:


→ Shortcut → select No Shortcut → press OK.

Sending the directory to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base sta-
- The other handset can send and receive directory entries.

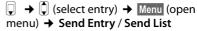

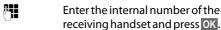

Successful transmission is acknowledged with the message Entry copied. You can transfer several individual entries one after the other by responding OK to the Next entry? prompt.

Please note:

- Entries with identical numbers won't be overwritten on the receiving handset.
- ◆ The transfer will be canceled if the phone rings or if the memory of the receiving handset is full.

Copying a displayed number to the directory

You can copy numbers displayed in a list (e.g. the calls list or redial list) to the directory. If you have CID, the first 16 characters of the transmitted name are copied to the **Enter Name** line.

A number is displayed:

Menu → Copy to Directory

▶ Complete the entry → page 22.

Last number redial list

The last number redial list contains the ten numbers last dialed with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed.

Manual last number redial

Press the display key.

Select entry.

Press the Talk key again. The

number is dialed.

Managing entries in the last number redial list

Redial Press the display key.

Select entry.

Menu Open menu.

The following functions can be selected with \Box :

Use Number (as in the directory,

→ page 23)

Copy to Directory

Copy an entry to the directory

(→ page 22).

Delete Entry (as in the directory,

→ page 23)

Delete List (as in the directory, → page 23)

Opening lists with the message key

An advisory tone sounds as soon as a **new message** arrives in a list. The we key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message.

If you press the message key , you access the lists that contain new messages.

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

With fast access, you can directly dial the network mailbox.

Configuring fast access for the network mailbox and entering the network mailbox number:

Menu → Voice Mail → Set Key 1 → Network Mailbox

Select and press $OK (\sqrt{} = on)$.

14

Enter the network mailbox number and press OK.

ি

Press and hold (idle status).

The setting for fast access applies to all handsets.

Calling your network mailbox

ا س

Press and **hold**. You are connected directly to the network mailbox.

Press the Speaker key , if required. You will hear the network mailbox announcement.

Viewing the network mailbox report

When a message is recorded, you receive a call from the network mailbox. If you have requested caller ID, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list, and the Message key flashes (> page 24).

ECO DECT

You are helping to protect the environment with your Gigaset handset.

Reducing energy consumption

By using an energy-saving power supply, your telephone consumes less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The transmission power of your telephone is **automatically** reduced depending on the distance to the base.

You can reduce the radiation of the handset and base even further by using **Eco Mode**. For further information, please refer to your base user guide.

Setting the alarm clock

Precondition: The date and time have already been set (→ page 10).

Activating/deactivating the alarm clock




After you activate the alarm clock, the menu for setting the wake-up time opens automatically (→ page 26).

If the alarm clock is set, the wake-up time appears with the

instead of the date.

Setting the wake-up time

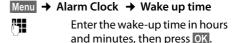

When the alarm clock rings...

Alarm repeats after 5 minutes

Snooze Press the display key or any key.

If you press Snooze three times, the alarm clock switches off for 24 hours.

Turning off the alarm clock for 24 hours

Off Press the display key.

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Changing date and time

To change the time, open the input field with:

Menu → Settings → Date/Time

Select **Set date/time** and press **OK**.

Enter Date:

Enter the month, day, and year in 8-digit format, for example,

| \text{lim} \text{Q-on} \text{Q-on} \text{Q-on} \text{Q-on} \text{Sever} for 10/01/09.

Enter time:

Enter hours and minutes as 4 digits, for example, [a] [law [s] for 07:15.

Press the display key am/pm to toggle the time setting between AM and PM.

Press the display key

OK

Time format

Menu → Settings → Date/Time Select and press OK.

Select **Time format** and press **OK**.

Choose between 12-hour format and 24-hour format (y = on):



Changing the display language

You can view the display texts in different languages.

Menu → Settings → Handset

→ Language

The current language is indicated by \checkmark .

Select a language and press OK.

Press and hold (idle status).

If you accidentally choose a language you do not understand:

Menu 1 pgrs 3 def 2 abc

Press keys in sequence.

Select the correct language and press OK.

Setting the display

You can display a digital clock when the handset is in idle status.

Menu → Settings → Handset → Display

You have the following options:

Screensaver

The available settings are **No Screensaver** or **Digital Clock**.

Activating/deactivating auto answer

When this function is activated, when a call arrives, you can simply lift the handset out of the base station or charger without having to press the Talk key .

Menu → Settings → Handset → Auto Answer (y = on)

ি

Press and hold (idle status).

Changing the handsfree/ earpiece volume

You can adjust the volume for handsfree talking to one of five settings (1-5, e.g. volume 3 = log) and the earpiece volume to one of three (1-3, e.g. volume 2 = log).

Setting the volume during a call

The setting applies to the current mode (earpiece or handsfree).

You are conducting an external call.

Press the Control key.

Set the volume.

The setting will automatically be saved after approx. 3 seconds. If not, press the display key OK.

Adjusting the volume using the menu

Menu → Settings → Audio Settings → Call Volume → Earpiece Volume / Handsfree Volume

Select and press OK.

Adjust the volume and

press OK.

Press and hold (idle status).

Changing ringer melodies

Volume:

Five volume levels (1–5; e.g. volume 3 = ■■□□ △) and "crescendo" ring (6; volume increases with each ringer melody = ■□□□ △).

◆ Melody:

List of preloaded ringer melodies. The first three melodies are the "classic" ringer melodies.

You can also set different ringer melodies for the following functions:

◆ External Calls: For external calls

◆ Internal Calls: For internal calls

◆ Alarm Clock: For the alarm clock

Setting the ringer volume

The ringer volume is the same for all types of ringer melodies.

Menu → Settings → Audio Settings

→ Ringer Volume

Or in idle status:

Press briefly.

Ringer Volume

Select and press OK.

Then:

Adjust the volume and

press OK.

ি

Press and **hold** (idle status).

Setting the ringer melody

Set different ringer melodies for external calls, internal calls, and the alarm clock.

Menu → Settings → Audio Settings → Ringer Melody

External Calls / Internal Calls / Alarm Clock

Select and press OK.

Selec

Select melody ($\sqrt{\ }$ = on) and press OK.

ি

Press and **hold** (idle status).

Activating/deactivating the ringer melody

You can turn off the ringer melody on your handset before you answer a call or while the phone is in idle status. You can take a call as long as it is displayed on the screen.

Deactivating the ringer melody

***** 4

Press the Asterisk key and hold until the α icon appears on the display.

Reactivating the ringer melody

***** 4

Press and **hold** the Asterisk key in idle status.

Advisory tones

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- **♦** Advisory tones:
 - **Key click**: every key press is confirmed.
 - Confirmation tone (rising tone sequence): at the end of an entry/setting, when the handset is placed in the base station and on arrival of a new entry in the calls list.
 - Error tone (descending tone sequence): When you make an incorrect entry.
 - Menu end tone: When scrolling at the end of a menu.
- Battery low beep: the battery requires charging.

You cannot deactivate the confirmation tone for placing the handset in the base station.

Activating/deactivating advisory tones

Menu → Settings → Audio Settings

→ Advisory Tones

Select and press OK ($\checkmark = on$).

Setting the battery low beep

Menu → Settings → Audio Settings → Battery Low

On / Off / During Call

Select and press OK (y = on). The low-battery beep is activated or deactivated or sounds during a call.

Restoring the handset to the factory settings

You can reset any individual settings and changes you have made. This will not affect entries in the directory, calls list, or the handset's registration to the base station.

Menu → Settings → Handset

→ Reset Handset

Confirm query with OK, or reject it with 5.



Press and hold (idle status).

Troubleshooting

If you have any questions about the use of your telephone, you can contact us at any time at www.gigaset.com/service.

The table below contains a list of common problems and possible solutions.

The display is blank.

- The handset is not on.
 - ▶ Press **and hold** the End Call key <a>ਿ.
- The batteries are dead.
 - Charge or replace the batteries (→ page 7).

" Base" flashes in the display.

- The handset is outside the range of the base station.
 - Move the handset closer to the base sta-

The base station's range is shorter because Eco Mode mode is activated.

- ▶ Deactivate Eco Mode (→ page 26) or reduce the distance between the handset and base station.
- The base station is not on.
 - Check the base station's power adapter.

Handset does not ring.

The ringer melody is deactivated.

Activate the ringer melody (→ page 28).

You cannot hear a ringer melody/dial tone from the fixed line network.

The phone cord supplied was not used or was replaced with a different cord that has the wrong pin connections.

 Always use the phone cord supplied or make sure that the pin connections are correct when purchasing one from a retailer.

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

▶ Reset the system PIN to 0000.

Forgotten the system PIN.

▶ Reset the system PIN to 0000.

The other party cannot hear you.

You have pressed the Mute display key. The handset is on "mute."

Activate the microphone again (\rightarrow page 21).

The number of the caller is not displayed despite CID.

Caller ID is not enabled.

▶ The user must ask the telephone network provider to activate Caller ID (CID).

You hear an error tone (descending tone sequence) when pressing keys.

Action has failed/invalid input.

▶ Repeat the operation. Watch the display and refer to the user guide if necessary.

You cannot listen to messages in the network mailbox.

Your PABX is set for pulse dialing.

Set your PABX to touch-tone dialing.

Appendix

Caring for your telephone

Wipe the charger and handset with a damp **cloth** (do not use solvent or a microfiber cloth) or an antistatic cloth.

Never use a dry cloth as this can cause static.

Contact with liquid /!



If the handset should come into contact with liauid:

- 1. Switch the handset off and remove the battery immediately.
- 2. Allow the liquid to drain from the hand-
- 3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave oven, convection oven, etc.).
- 4. Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will usually be able to use it again.

Specifications

Recommended batteries

Technology: Nickel-metal hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550-1000 mAh

We recommend the following battery types because these are the only ones that guarantee the specified operating times, full functionality, and long service life:

- ◆ GP 700 mAh
- ◆ Yuasa Phone 700 mAh
- ◆ Yuasa Phone 800 mAh
- Yuasa AAA 800
- ◆ Peacebay 600 mAh

The handset is supplied with nickel-metal hydride UL-approved AAA batteries.

Handset operating times/charging times

The operating time of your telephone depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times

	Capac	ity (mA	h) appr	ox.
	550	650	800	1000
Standby time (hours)	180	210	265	330
Talk time (hours)	23	25	33	41
Operating time for 1.5 hours of calls per day (hours)	80	95	115	145
Charging time, charging cradle (hours)	6	7	9	11

At the time of publication, batteries up to 800 mAh were available and had been tested in the system. In light of continuous advances in battery technology, the list of recommended batteries is regularly updated.

General specifications

DECT 6.0	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1920–1930 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 Kbps
Modulation	GFSK
Language code	32 Kbps
Transmission power	10 mW, average power per channel
Range	Up to 984 feet outdoors, up to 165 feet indoors
Power supply unit	110 V ~/60 Hz
Environmental operating conditions	+5 to +45 °C, 20% to 75% relative humidity
Dialing mode	DTMF (touch-tone dialing)/DP (pulse dialing)

Writing and editing text

The following rules apply when writing text:

- ◆ Use ☐ ☐ to move the cursor to the left or right.
- Characters are inserted to the left of the cursor.
- The first letter of directory entry names is automatically capitalized, followed by lowercase letters.

Entering characters

Press the relevant key several times to enter letters/characters.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
1 00	1)	2)	1	€	£	\$	¥	¤						
2 abc	a	b	C	2	ä	á	à	â	ã	ç				
3 def	d	е	f	3	ë	é	è	ê						
4 ghi	g	h	i	4	ï	ĺ	ì	î						
5 jkl	j	k	ı	5										
6 mno	m	n	0	6	ö	ñ	Ó	ò	ô	Õ				
] pqrs	р	q	r	S	7	ß								
8 tuv	t	u	٧	8	ü	ú	ù	û						
9wxyz	w	Х	у	Z	9	ÿ	ý	æ	Ø	å				
O Oper		,	?	!	0	+	-	:	į	i	"	1	;	_
* 4	*	/	()	<	=	>	%						
# 🗝			#	@	\	&	§							

- 1) Space
- 2) Line break

When you press a key, the characters of that key appear in the display. The first character is highlighted. If it is not the one you want, press the key repeatedly until the required character is highlighted. When you release the key, the highlighted character is inserted into the input field.

Setting uppercase/lowercase or digits

Press the Pound key ** briefly to switch from "Abc" mode to "123," from "123" to "abc," and from "abc" to "Abc" (uppercase: 1st letter uppercase, all others lowercase). Press the Pound key ** before entering the letter.

You can see briefly in the display whether uppercase, lowercase, or digits is selected.

Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.
This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC / ACTA Information

Warning: Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to

the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: www.gigaset.com/docs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network

until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866 247-8758. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin

service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have guestions about what will disable alarm equipment, consult your telephone company or a qualified installer. This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the base station and receiver.
- 3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio TV technician for help.

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Notice:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:
If you need service from your telephone company,
please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

- 1. Read and understand all instructions.
- 2. Follow all warnings and instructions marked on the product.
- 3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
- 4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
- 5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
- 6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
- 7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
- 8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
- 9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
- 11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
- 12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a.) When the power cord is damaged or frayed.
- b.) If liquid has been spilled into the product. c.) If the product has been exposed to rain or water.

- d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
- e.) If the product has been dropped or physically has been damaged.
- f.) If the product exhibits a distinct change in performance.
- 13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrestor.
- 14. Do not use the telephone to report a gas leak in the vicinity of the leak.
- 15. Emergency/911 numbers may not be dialed if the keypad is locked.
- 16. Minimum No. 26 AWG telecommunication line cord must be used with this phone.

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions. CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this

- product.
 2. DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
- 3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
- 4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
- 5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
- 6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
- 7. Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products
To obtain Customer Care Warranty service,
product operation information, or for problem resolution, call:
Toll Free: 1-866 247-8758

End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866 247-8758.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.

- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
- Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
- Consumables (such as batteries and fuses).

- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (i.e., the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

1-866 247-8758

5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT**

ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES,

if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WAR-RANTY, AND TO THE MAXIMUM EXTENT PERMIT-TED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUD-ING, BUT NOT LIMITED TO, THE IMPLIED WARRAN-TIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COM-PLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE. OUIET ENJOYMENT, OUIET POSSESSION, OR COR-RESPONDENCE TO DESCRIPTION OR NONIN-FRINGEMENT WITH REGARD TO THE PRODUCT. Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/ province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIM-ITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD. THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLI-CABLE LAW, IN NO EVENT SHALL GIGASET NAM. SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUEN-TIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REA-SONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSO-EVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PROD-UCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIM-ITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WAR-RANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAM-AGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLI-ERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REM-EDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WAR-RANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM

EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at **http://www.gigaset.com** or please call 1-866 247-8758.

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt
Manufactured by Gigaset Communications GmbH
under trademark license of Siemens AG.


© Gigaset Communications GmbH 2010 All rights reserved.

Subject to availability. Rights of modifications reserved.

Product attributes subject to change. We reserve the right, to make changes without notice in equipment design and/or components. Part Number: A31008-M2055-R301-1-6019

© Copyright 2010.

Mounting the charging cradle on the wall

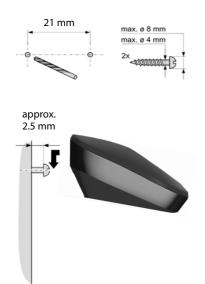

Index Correcting incorrect entries 15 Α Activating D Deactivating call acceptance 27 advisory tones 29 call acceptance 27 keypad lock 16 Deletina Dialing using shortcut keys 23 Dialing pause **Automatic** entering......1 Digital clock 27 В copying number from text 24 **Battery** managing entries 23 recommended batteries 31 sending entry/list to handset........ 23 Display C changing display language 27 Call accepting 19 Ε Calling ECO DECT 26 Caring for your telephone................. 30 Changing Ending, see Deactivating earpiece volume 28 Entry selecting from directory 22 CID 2.5 services (network services)..... 21 Configuring the network mailbox..... 25

F	K
Fast access	Key 1 (fast access)
network mailbox	Key click
riasii key	Keys
G	assigning directory entry 23
General troubleshooting 30	Asterisk key
Н	Control key
Handset	Delete key
activating/deactivating16	display keys
advisory tones	fast access
contact with liquid	Flash key
display language	Internal key1
earpiece volume	Message key1
idle status	On/Off key1
muting21	Pound key
restoring factory settings 29	Shortcut
setting	Speaker key1
setting up7	Talk key 1, 19
Handsfree talking 20	L
Help 30	Last number redial 24
I	Local area code 12
Icon	Lock
alarm clock set	activating/deactivating keypad lock 16
battery9	M
display	Making calls
for new messages	answering a call
keypad lock	external
ringer melody deactivated 28 Idle status	internal 21
display 12	Manual last number redial 24
returning to	Medical appliances
Incorrect input (correction)	Menu end tone
Industry Canada Certification 33	overview
Internal	prompting
key1	Message key1
making calls 21	opening lists24
Internal call	Microphone1
	Muting
	handset 21

Index

N
Network services (CID 2.5 services) 21
Number
copying to directory
displaying caller's number (CID) 19
saving in the directory
0
On/Off key1
Order in directory
•
P
Package contents5
Pound key
Power adapter4
0
Questions and answers
Questions and answers
R
Range5
Ringer melody
changing
setting melody28
setting volume
S
Safety precautions
Screensaver
Searching in directory
Sending directory entry to handset 23
Service (Customer Care)
Setting
date10, 27
melody (ringer melody)
time10, 27
wake-up time
Setting up
handset
Shortcut18, 23
Snooze (alarm clock)
Speaker key1
Specifications31

T Talk key
U Unknown caller
V Viewing the network mailbox report 25 Volume earpiece volume
W Warning tone (battery)

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt
Manufactured by Gigaset Communications GmbH
under trademark license of Siemens AG.
As of 1 Oct. 2011 Gigaset products bearing the
trademark 'Siemens' will exclusively use the trademark 'Gigaset'.

© Gigaset Communications GmbH 2010 All rights reserved. Subject to availability. Rights of modification reserved.

www.gigaset.com

This user guide is made from 100% recycled paper.